

„MOTION“ Instructions

ATTENTION: Please read this operating manual carefully before you operate the lock or set a new number combination. We assume no liability for any malfunction caused by faulty changeover, use of force, improper handling or for material or property damage, due to the improper closing of the safe.

Your safe "**Motion**" can be opened with a master code, a guest code or with one of the two emergency opening keys provided.

Each time you press a key is acknowledged with an acoustic signal.

Each key pressing can be corrected by pressing the " * " key.

If you don't want the entered code to be shown (the master or the guest code) when entering the code press the " * " key . Instead of the entered number it will be displayed, " - " .

It is not recommended to use non-alkaline batteries.

The safe is shipped from the factory with the master code 0-0-0-0-0 and the guest code 1-6-8-0. For security reasons, we recommend that you immediately change the master code and guest code to a personal code.

1. GETTING STARTED:

- a. Remove the cover of the emergency opening lock that is located on the right part of the keyboard.
- b. Insert one of the two supplied emergency opening keys into the lock.
- c. Turn the key to the right.
- d. Open the door.
- e. Turn the key back to its original position and remove it.
- f. Remove the securing screw from the battery compartment cover from the inside of the door.
- g. Slide the cover of the battery compartment up.
- h. Insert four 1.5 volt AA alkaline batteries (pay attention to the correct polarity when inserting the batteries).
- i. The display shows "HELLO" - the safe is now ready for use.
- j. Close the battery compartment.

2. MISSING INPUT

If you ever enter the wrong code and press the " # " key, a five-time acoustic signal appears and the message "ERROR-1" is written on the display. If you make another incorrect entry, "ERROR-2" is written on the display and also "ERROR-3" after three incorrect entries.

3. LOCK TIME AFTER AN INCORRECT ENTRY

If an incorrect code has been entered three times, the word "HOLd05" appears on the display and a five-minute lock period begins, the safe is blocked. No input is possible during this five minute lock period. If the electronic lock is activated during the lock period and a key is pressed , the word "HOLd05" appears on the display and the remaining lock time is counted down until it expires. This lock time can not be canceled, even if you remove the batteries.

4. BATTERY CHANGE (If the display becomes weak, the writing is unreadable, or if the opening is no longer possible, you should immediately replace the batteries).

- a. If necessary, open the safe with the emergency opening key (see point 9 - opening with emergency opening key).
- b. Remove the securing screw from the battery compartment cover from inside of the door.
- c. Slide the cover of the battery compartment upwards.
- d. Remove the old batteries.
- e. Insert new batteries (alkaline) – pay attention to the correct polarity.
- f. Close the battery compartment.

ATTENTION after a battery change, the stored codes (master code, user code) will remain in the system.

5. CHANGING THE MASTER CODE (The master code you have chosen remains in the system/will be memorized after a battery change)

- a. Press the " * " key twice.
- b. The display shows "GREAT".
- c. Enter the current master code (at delivery 0-0-0-0-0-0).
- d. Press the " # " button to confirm.
- e. The display will show "CC--".
- f. Enter "0 1" to change the master code.
- g. Press the " # " button to confirm.
- h. The display shows "NEW".
- i. Enter the desired master code (6 digits).
- j. Press the "#" button to confirm.
- k. The display will show "rEPEAt".
- l. Type again the desired master code (6 digits).
- m. Press the " # " button to confirm.
- n. If "GOOD" appears on the display, the master code has been successfully changed.
- o. "CC--" appears on the display.
- p. Press the " * " key to exit the menu.

ATTENTION if during the programming the word "ERROR" appears on the display, then start programming from point 5.f.

6. CLOSING – SAVING THE GUEST CODE

- a. Close the door and enter the guest code you want (three to six digits).
- b. The entered code is shown on the display.
- c. Confirm the entry by pressing the " # " key.
- d. The safe is automatically locked and the display shows "CLOSE".
- e. After closing correctly, the display shows "CLOSED" and the selected code.
- f. If a correct closing is not possible, the display shows "ERROR".
- g. Start sealing it again as described in section 6-a.

7. OPEN WITH THE GUEST CODE

- a. With the door closed or the blocking mechanism activated, touch the touchscreen in the middle, and the message "HELLO" will appear on the display, enter the guest code that you have stored (four, five, or six digits).
- b. Confirm the entry by pressing the " # " key.
- c. During the opening process "OPEN" appears on the display.
- d. After the opening, "OPENED" appears on the display.

INFO

If you want to lock the safe again with the previously selected guest code, you only have to press the " # " key with the door closed.

The safe closes as described at the point 6-d and can be opened with the previously selected guest code as it is described at point 7.

8. OPEN WITH THE MASTER CODE

- a. Press the " * " key twice.
- b. The display shows the word "GREAT".
- c. Enter the current master code (at delivery 0-0-0-0-0-0).
- d. Press the " # " button to confirm.
- e. The display will show "CC--".
- f. Enter "0 0" for the opening using the master code.
- g. Press the " # " button to confirm.
- h. During the opening process the word "OPEN" appears on the display.
- i. After opening, the word "OPENED" appears on the display.

9. OPENING USING THE EMERGENCY OPENING KEY

- a. Remove the cover of the emergency opening lock located on the right of the keyboard.
- b. Insert one of the two supplied emergency opening keys with the notch up into the lock.
- c. Turn the key to the right.
- d. If the battery voltage of the safe is sufficient, the display will show the word "OPENED" and the safe will open.
- e. To remove the key, you must turn the key back to its original position – the safe will be closed again.

10. LOGGING

The safe model **"MOTION"** is standardly equipped with a simple protocol function.

In order to be able to use the protocol function correctly, it is recommended to set the current date and time when the safe is put into operation.

The date is displayed in the format YYYYMMDD (year - month - day).

The time is displayed in the format SSMMSS (hour-minute-second).

PROGRAM THE DATE / TIME

- a. Press the " * " key twice.
- b. The display shows the word "GREAT".
- c. Enter the current master code (at delivery 0-0-0-0-0-0).
- d. Press the " # " button to confirm.
- e. The display will show "CC--".
- f. Enter "0 8".
- g. Press the " # " button to confirm.
- h. The display will show "SEt-dt".
- i. Now enter the last two digits of the current year (eg 17 for 2017), the current month (eg 05 for May) and the current day.
- j. Press the " # " button to confirm.
- k. The display will show a system of time.
- l. Enter the current time (in 24-hour format)
- m. Press the " # " button to confirm.
- n. "GOOD" appears on the display.
- o. Date and time have been set.
- p. The display shows "CC--".
- q. To exit the menu, press the " * " key.

READ THE OPENING PROTOCOL

- a. Press the " * " key twice.
- b. The display shows the word "GREAT".
- c. Enter the current master code (at delivery 0-0-0-0-0-0).
- d. Press the " # " button to confirm.
- e. The display will show "CC--".
- f. Enter "0 9".
- G. Press the " # " button to confirm.
- H. The display will show the word "RECORD" for a short time.
- i. The last opening is displayed. The journal is displayed in the following format "YYMMDD" "SSMM – the opening type".
- j. Press the "6" key to display the time and the opening type.
- k. Press the "2" key to display the previous openings.
- a. To exit the menu, press the " * " key twice.

PROTOCOL INFORMATION

- 1 - opening with the master code.
- 8 - opening with the guest code.
- 9 - opening with the emergency opening key.

EXAMPLE OF PROTOCOL: 1701011212-1

17	01	01		12	12	1
17 JJ = Year	01 MM = Month	01 TT = Day	Press the button „ 6 “	12 SS = Hour	12 MM = Minute	1 Opening type = Master code

Press the button „ 6 “ to display time and the opening type.

NAVIGATION IN THE PROTOCOL MENU

- 6 – Display the time and the opening type.
- 2 – Show the previous opening.
- 4 – Show the date of the opening.
- 8 – Show the next opening.

11. RESET THE MASTER CODE TO THE FACTORY SETTINGS

- a. Remove the door trim panel.
- b. Press the "RESET" button for ten seconds.
- c. After five seconds, the word "RESET" appears on the display.
- d. The master code is reseted to the factory settings (0-0-0-0-0-0).